

# 2014 NAVIGATION/MULTIMEDIA Receiver Firmware Update Guide

## Introduction

- This document describes the procedure and precautions for upgrading the 2014 NAVIGATION/MULTIMEDIA receiver firmware.
- If an error occurs while you are updating the firmware, the 2014 NAVIGATION/MULTIMEDIA receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.

## Target Model and Firmware Version

The updater can be used for the firmware versions of the models shown below.

Target models	Target firmware versions → Updated versions
DNN991HD, DNN9250DAB, DNN6250DAB	Ver 1.7.0 or earlier → 1.8.0
DNR8025BT	Ver 1.6.0 or earlier → 1.7.0
DNN9710BT, DNN9350BT, DNN9350BTM	Ver 1.x.x → 1.7.0 Ver 2.x.x → 2.6.0
DNR8035BT, DNR8035BTM	Ver 1.x.x → 1.7.0 Ver 2.x.x → 2.6.0



- For how to check your firmware version, refer to “Checking the Firmware Version”.

## Creating the Update Media

Create the update media on your PC.

 
1. Download the Updates from the Web site.
2. Decompress the downloaded file.
3. Copy the decompressed file to the top of hierarchy in USB memory.




- You can also copy the updater to a device containing audio files and update the firmware from it.
- Update cannot be performed if it is copied inside a folder.
- If the updater file name is changed, update cannot be performed.

## Checking the Firmware Version

1. Press the [  ].

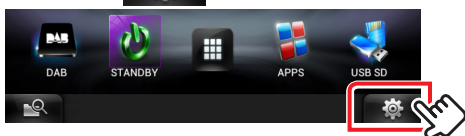

 
2. Press the [SETUP] icon to display the Setup Menu screen.





 3. Press the [Software] to display the Software Information screen.

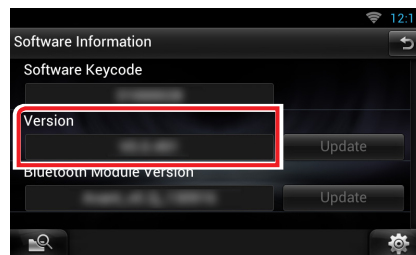


4. Check the version.



## Updating the Program

 1. Connect the USB memory.
2. When an audio file is played or “No Media File” is displayed, press the [HOME] button twice. Touch [  ] in the Source launcher panel. Press the [STANDBY].
3. Press the [  ].
4. Press the [SETUP] icon to display the Setup Menu screen.
5. Press the [Software] to display the Software Information screen.
6. Press the [Update] to update starts. (It takes about 15 minutes.)

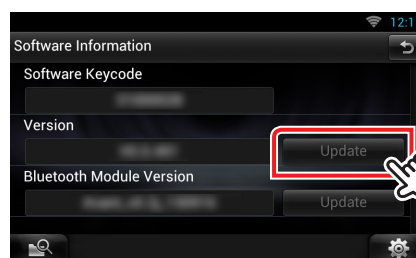

**Caution:** The screen may go blank for a few seconds. Do not unplug the USB memory or Power Off the unit during the Update Procedure.

7. System Reboot & Software Update Screens
8. Once the “Update completed” screen is displayed, remove the USB memory and restart the unit.
9. Check that the firmware version is updated, by referring to “Checking the Firmware Version”.  
When “Version 1.8.0”/ “Version 1.7.0”/ “Version 2.6.0” is displayed, the firmware version is updated successfully.



### When [Update] is not in active

- Incorrect version of updater might be downloaded.  
Check the target firmware version on the download site again and download the appropriate updater, and create the update media.

## Precautions

- Update cannot be performed with other media.
- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- Do not turn off the engine or Navigation/Multimedia receiver power while updating. Update cannot be performed correctly and the Navigation/Multimedia receiver may become unusable.