

2009 NAVIGATION/MULTIMEDIA Receiver Firmware Update Guide

Introduction

- This document describes the procedure and precautions for upgrading the 2009 NAVIGATION/MULTIMEDIA receiver firmware.
- If an error occurs while you are updating the firmware, the 2009 NAVIGATION/MULTIMEDIA receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.

Target Models

This updater can be used to update the firmware of the following models.

Model Group B		Model Group C	
DDX6034	DNX7000EX	DDX8024BT	DNX9140
DDX6034M	DNX7140	DDX8034BT	DNX9240BT
DDX6054	DNX7240BT	DDX8034BTM	
DDX7034BT	DNX7340BT	DDX8054BT	
DDX7034BTM	DNX7340BTM	DDX814	
DDX714	DNX7540BT		

Target Firmware

The unit will be upgraded to the following version by executing this updater:

Model Group B : Ver. 1.9.0


Model Group C : Ver. 1.9.0

If your unit's version is earlier than that of the above, carry out the updating procedure.

For the information on how to check the firmware version, refer to <Checking the Firmware Version> below.

Checking the Firmware Version

Touch [⏪] > [⏩] > [Information] > [Software].

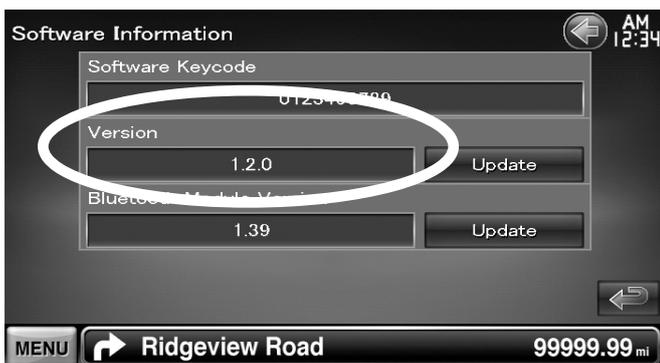

Creating the Program Update Disc

1. Download the Updates from the Web site.
2. Decompress the downloaded file.
3. Burn the decompressed file onto a Disc Media.

Updating the Program

1. Insert the Program Update Disc into disc slot.


2. Select STANDBY source.

Press [SRC] button on the front panel >
Touch [STANDBY] on Source Select screen.

- If [STANDBY] is not appeared on Source Select screen, touch [V] or [A] to display it.

3. Display the Software Information screen and start updating.

Touch [⏪] > [⏩] > [Information] > [Software].

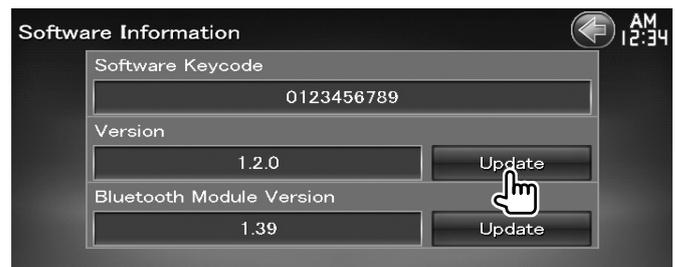

- It takes about 25 minutes to complete the update.

4. Complete the update.



- After the screen above appeared, turn the power off by pressing the [SRC] button on the front panel for more than 1 second and press it again to turn the power back on.

5. Press the [▲] button on the front panel to eject the update disc.

Precautions

- Use the Disc media as the update media. CD-R/RW or DVD-R/RW is recommended.
- Update cannot be performed with other media (USB memory device).
- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- Do not turn off the engine or Navigation/Multimedia receiver power while updating. Update cannot be performed correctly and the Navigation/Multimedia receiver may become unusable.