

# CD/USB Receiver Firmware Update Guide

## Introduction

- This document describes the procedure and precautions for upgrading the CD/USB receiver firmware.
- If an error occurs while you are updating the firmware, the CD/USB receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.
- For basic operations of the CD/USB receiver, refer to the appropriate instruction manual for your model.

## Target Model and Firmware Version

The updater can be used for the firmware versions of the models shown below.

Target models	Target firmware versions → Updated versions	Updater file name (size)
KDC-BT265U, KDC-BT500U, KDC-MP365BT, U310BT	Ver V137 or earlier → V138	te1510k.krm (6.50 MB)
KDC-300UV, KDC-300UVM, KDC-BT365U, KDC-X300, KDC-BT600U, KMR-D365BT, KDC-BT565U, KDC-X500, KMR-D765BT, KDC-X5000BT, U350BT, U410BT	Ver V137 or earlier → V138	te1512k.krm (6.50 MB)
DPX592BT, DPX502BT, DPX530BT, DPX-5000BT, DPX- U730BT	Ver V137 or earlier → V138	te1512k.krm (6.50 MB)
KMM-BT302 (Covered areas: Europe)	Ver V117 or earlier → V118	ml1527e.krm (6.50 MB)
KMR-M315BT, KMM-BT315U, KMM-BT315, KMM-BT302 (Covered areas: Asia)	Ver V116 or earlier → V117	ml1528k.krm (6.50 MB)
KDC-BT765HD, KDC-X700	Ver V117 or earlier → V118	te1518k.krm (6.50 MB)
DPX792BH, DPX702BH	Ver V117 or earlier → V118	te1518k.krm (6.50 MB)
KDC-BT700DAB	Ver V123 or earlier → V124	te1521e.krm (6.50 MB)
KDC-X7000DAB	Ver V123 or earlier → V124	te1522e.krm (6.50 MB)
DPX-7000DAB	Ver V123 or earlier → V124	te1522e.krm (6.50 MB)
KMM-BT502DAB	Ver V114 or earlier → V115	ml1531e.krm (6.50 MB)
KMM-BT515HD	Ver V115 or earlier → V116	ml1555k.krm (6.50 MB)
KDC-DAB400U	Ver V104 or earlier → V105	te1520e.krm (6.50 MB)



- For how to check your firmware version, refer to "Checking the Firmware Version".

## Work Flow

- Step 1** Download the firmware files, and copy them to USB memory.
- Step 2** Update the firmware. (It takes about 2 minutes.)  
Reset the CD/USB receiver.
- Step 3** Check that the firmware has been updated.

## Creating the Update Media

Create the update media on your PC.

1. Download the appropriate updater for the model and firmware version to update.
2. Copy the updater to the top of hierarchy in USB memory.




- You can also copy the updater to a device containing audio files and update the firmware from it.
- Update cannot be performed if it is copied inside a folder.
- If the updater file name is changed, update cannot be performed.

## Checking the Firmware Version

1. Press the [SRC] button and select "STANDBY" (standby state).
2. Press the [VOL] knob to enter the function mode.  
"FUNCTION"/"DISPLAY" is displayed.
3. Turn the [VOL] knob to display "SYSTEM", and press the [VOL] knob.
4. Turn the [VOL] knob to display "F/W UPDATE", and press the [VOL] knob.
5. Turn the [VOL] knob to display "UPDATE SYSTEM", and press the [VOL] knob.  
Current firmware version is displayed.

## Firmware Update Procedure

1. Connect the updater media to the CD/USB receiver.  
 **KMR-D765B, KDC-300UV, U410BT**  
Do not connect anything to the rear USB input terminal.
  2. When an audio file is played or "NO MUSIC" is displayed, press the [SRC] button and select "STANDBY" (standby state).
  3. Press the [VOL] knob to enter the function mode.  
"FUNCTION"/"DISPLAY" is displayed.
  4. Turn the [VOL] knob to display "SYSTEM", and press the [VOL] knob.
  5. Turn the [VOL] knob to display "F/W UPDATE", and press the [VOL] knob.
  6. Turn the [VOL] knob to display "UPDATE SYSTEM", and press the [VOL] knob.
  7. Press the [VOL] knob again.
  8. Turn the [VOL] knob to display "YES", and press the [VOL] knob.  
"FILE CHECK" is displayed.
- Caution:** The screen may go blank for a few seconds.  
Do not unplug the USB memory or Power Off the unit during the Update Procedure.
- Update starts with "UPDATING" displayed. Update should finish in **approximately 2 minutes** and "COMPLETED" is displayed upon completion.
  9. The receiver reboots automatically.  
Update on the firmware takes effect.
  10. Check that the firmware version is updated, by referring to "Checking the Firmware Version".



- **When "NO FILE" is displayed**
  - Check if the updater is on the top of hierarchy.
  - Check if the updater file name is appropriate for the model to update.
- **If "WAIT" is displayed more than 5 minutes, you may fail the firmware update. In this case, check the following items**
  - Pull out the USB memory and insert it again.
  - Check if your USB memory has security function. If so use the one without security function.
  - Your USB memory may have problem. Update with another USB memory.
  - The firmware is not downloaded and copied to the USB memory successfully. Download and copy it again.

## Precautions

- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- **Do not turn off the engine or CD/USB receiver power while updating.**  
Update cannot be performed correctly and the CD/USB receiver may become unusable.