

KENWOOD

UHF TRANSCEIVER

TK-3701D

USER GUIDE

(For Singapore market only)



ProTalk DIGITAL

JVCKENWOOD Corporation



ADDENDUM

CHANNEL LIST

This transceiver allows you to reprogram each of the channels with different frequencies and ID (Digital)/ QT/DQT (Analogue) settings. The table below lists the default channel settings.

Channel Number	Analogue		Digital	
	Zone 1		Zone 2	
	Frequency (MHz)	QT/DQT	Frequency (MHz)	ID
1	446.006250	94.8 Hz	446.003125	1
2	446.093750	88.5 Hz	446.009375	2
3	446.031250	103.5 Hz	446.015625	3
4	446.068750	79.7 Hz	446.021875	4
5	446.043750	118.8 Hz	446.028125	5
6	446.018750	123.0 Hz	446.034375	6
7	446.081250	127.3 Hz	446.040625	7
8	446.056250	85.4 Hz	446.046875	8
9	446.006250	107.2 Hz	446.053125	9
10	446.093750	110.9 Hz	446.059375	10
11	446.031250	114.8 Hz	446.065625	11
12	446.068750	82.5 Hz	446.071875	12
13	446.043750	D132N	446.078125	13
14	446.018750	D155N	446.084375	14
15	446.056250	D134N	446.090625	15
16	446.081250	D243N	446.096875	16

This addendum superseded the supplied "User guide". Intended for use in Singapore according to IMDA_TS_LMR Issue 1, 1 October 2016 Standard. Considering environmental factor, JVCKENWOOD will not reprint the whole book again.

Model	Frequency range	Max. output power
TK-3701D-E	446.003125 - 446.096875 MHz	0.5 W e.r.p.