

2014 NAVIGATION/MULTIMEDIA Receiver Firmware Update Guide

Introduction

- This document describes the procedure and precautions for upgrading the 2014 NAVIGATION/MULTIMEDIA receiver firmware.
- If an error occurs while you are updating the firmware, the 2014 NAVIGATION/MULTIMEDIA receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.

Target Models

This updater can be used to update the firmware of the following models.

DNN991HD	DNN9710BT	DNN9250DAB	DNN9350BT
DNN9350BTM	DNN6250DAB	DNR8025BT	DNR8035BT
DNR8035BTM			

Target Firmware

This updater can be used to update the following firmware version:

Ver 21*A_v10w or earlier

To check the firmware version, refer to "Checking the Firmware Version" below for information on how to check the firmware version. By executing this updater, the firmware version will become "Version 21*A_v11c".

Creating the Update Media

Create the update media on your PC.

1. Download the Updates from the Web site.
2. Decompress the downloaded file.
3. Copy the decompressed file to the top of hierarchy in USB memory.




- You can also copy the updater to a device containing audio files and update the firmware from it.
- Update cannot be performed if it is copied inside a folder.
- If the updater file name is changed, update cannot be performed.

Checking the Firmware Version

1. Press the [Settings] icon.




2. Press the [SET-UP] icon to display the Setup Menu screen.



3. Press the [Software] to display the Software Information screen.




4. Check the version.

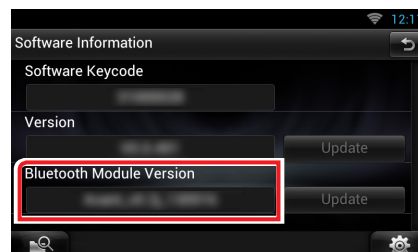

Updating the Program

1. Connect the USB memory.
2. When an audio file is played or "No Media File" is displayed, press the [HOME] button twice. Touch [Source] in the Source launcher panel. Press the [STANDBY].
3. Press the [Settings] icon.
4. Press the [Setup] icon to display the Setup Menu screen.
5. Press the [Software] to display the Software Information screen.
6. Press the [Update] to update starts. (It takes about 15 minutes.)

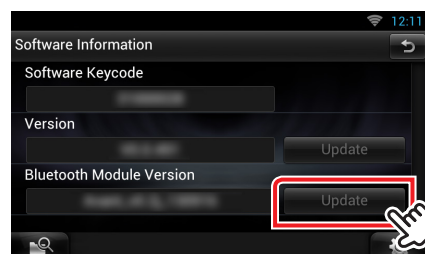

Caution: The screen may go blank for a few seconds. Do not unplug the USB memory or Power Off the unit during the Update Procedure.

7. Once the "Update completed" screen is displayed, remove the USB memory and restart the unit.
8. Press and hold <MENU> to turn off the power.
9. Press <MENU>.
10. Check that the firmware version is updated, by referring to "Checking the Firmware Version". When "Version 21*A_v11c" is displayed, the firmware version is updated successfully.

Precautions

- Update cannot be performed with other media.
- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- Do not turn off the engine or Navigation/Multimedia receiver power while updating. Update cannot be performed correctly and the Navigation/Multimedia receiver may become unusable.