Learning Steering Remote Function

No need for a third party adapter for most Japanese/Korean cars.

TOYOTA (20P)	TOYOTA (28P)	TOYOTA (26P)	TOYOTA (10P+6P)	HONDA (20P-B)
	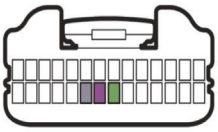		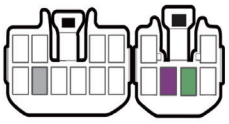	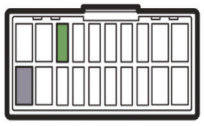
Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red
Input 2 : Purple/Red	Input 2 : Purple/Red	Input 2 : Purple/Red	Input 2 : Purple/Red	Input 2 : NC
ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red

HONDA (20P-A)	HONDA (24P)	NISSAN (16P-A)	NISSAN (20P)	NISSAN (16P-B)
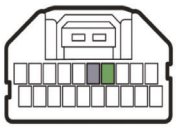	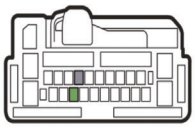			
Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red
Input 2 : NC	Input 2 : NC	Input 2 : Purple/Red	Input 2 : Purple/Red	Input 2 : Purple/Red
ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red

MITSUBISHI (20P)	MAZDA (24P)	SUBARU (20P)	SUBARU (8P)	SUZUKI (20P)
				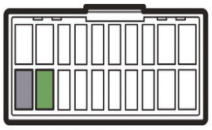
Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red
Input 2 : NC	Input 2 : NC	Input 2 : NC	Input 2 : NC	Input 2 : NC
ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red

ISUZU (16P)	HYUNDAI / KIA (24P-A)	HYUNDAI / KIA (24P-B)	
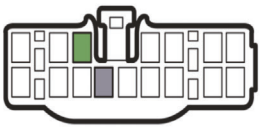	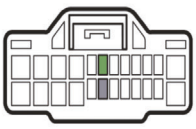	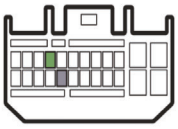	
Input 1 : Green/Red	Input 1 : Green/Red	Input 1 : Green/Red	The information for each vehicle above was investigated by JVCKENWOOD Asia Headquaters, and may not cover all of the connector types. Please contact your local KENWOOD dealer for details.
Input 2 : NC	Input 2 : NC	Input 2 : NC	
ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	ST REMOTE GND : Gray/Red	

Location of Steering Remote Connector

If the vehicle is equipped with an OEM steering remote controller, the steering remote connector is commonly located in the console.

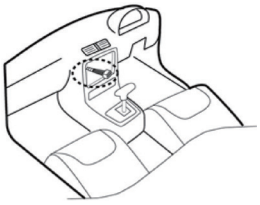

Steering Remote Cable

Connect to Vehicle's Steering Remote Harness.

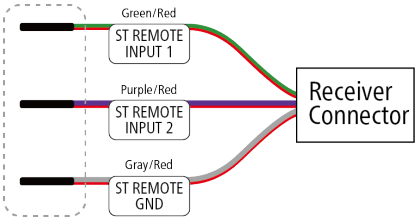

How to view Steering Remote Connector



All steering wheel remote controls above are vehicle side connectors and drawn from the side. (view indicated by arrow)

1) Look for a steering remote connector that is the same shape as in the image above in the console.
2) Connect "Input 1", "Input 2" and "ST REMOTE GND" to the pins shown in matching colors on the above list of connectors.